## **Coal-trol Digital Hardware Troubleshooting** Instructions: START With Coal-trol Control Module plugged in, begin at START box and systematically work to identify problem cause. For for service contact your dealer or call Automation Correct at (315) 299-3589. 1) Check power to Control Module. 2) If power-vented, reset or repair Fume Motor Cord Color Code Reference Is Thermostat Switch and/or power vent./draft system. RED - Stoker (Feeder) Display Working? 3) Be sure that thermostat cord is fully BLUE - Combustion seated on both ends. YELLOW - Convection 4) Repair/replace thermostat cord. GREEN - Igniter or not used Yes DO NOT REPLACE FUSE YET! 1) Repair Thermostat Does On/Off switch 1) Unplug all stove motors from control module. Fixed? light up when ON? 2) Repair Control Module. 2) Test each motor by plugging directly into wall outlet. Does each motor Replace/repair operate properly? defective motor. every 30 sec 1) Put thermostat into TEST mode: A) Press and hold MENU button "STOKER": Only Feeder motor should run. Yes untill "Feed" is displayed. "CMBSTN" : Only Combustion blower should run. B) press MENU button once. "Test" is "CNVCTN": Only Convection blower should run. displayed. Pass? "IGNITR": No motors. Igniter if installed. C) Press UP button once. Test mode sequence 1) Plug motors back into "AUX": No motors. Furnace fan, if installed" is initiated. control module. "IC xxx": No motors. ignition counter. D) Turn Control Module On. 2) Replace fuse on control To EXIT Test mode, press MENU button. module. (10A Max) Yes Does On/Off switch light up when ON? No 1) Check for binding or mechanical reason why motor might be stalled. Repair Control Module 2) Check that motor cord colors are matched to correct receptacle.