

Changing LOGO set-point parameters via LOGO screen

Use up/down arrows to scroll to screen you want to change set-point parameter in.

Hold ESCAPE key until you see a small curser under the first letter of the name of the first parameter.

Use up/down arrows to scroll to the name of the parameter you want to change.

Press OK.

It should now highlight the set-point value. Use arrow keys to change the set-point (Note: You can only change set-points, not process variables).

Press OK.

Press ESCAPE key to exit parameter change mode.