


Wiring Schematic 2

Tuesday, October 09, 2012
11:30 PM

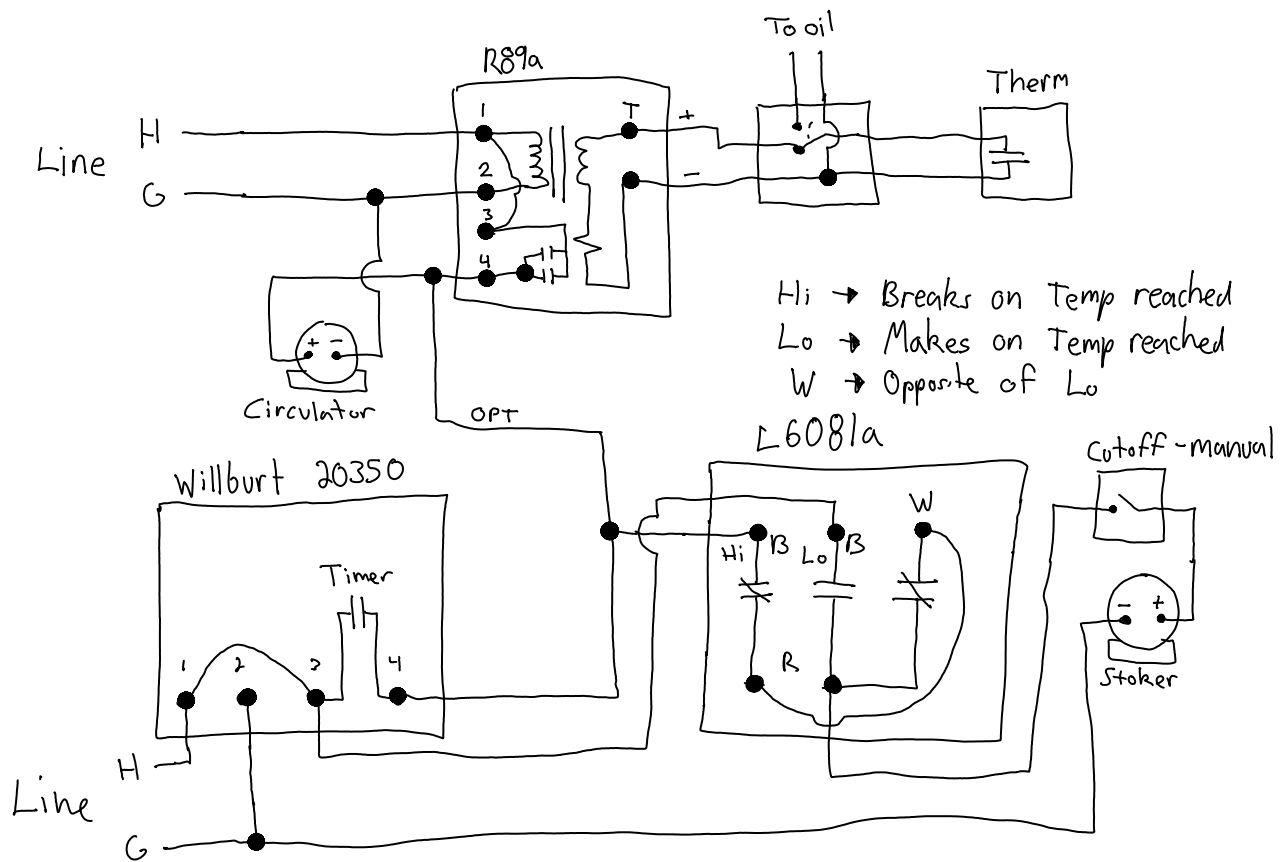

Operation:

- On call for heat → R89a energizes circulator, if Hi-Limit of L6081a not reached, stoker is energized
- On timer cycle → Willburt 20350 energizes circulator, if Hi-Limit of L6081a not reached, stoker is energized
- On Lo-Limit cycle → L6081a energizes stoker